

Panel	MAIN SIZE & TYPE	600A MLO	LOCATION	PROJECTION BOOTH
CINERGY AMARILLO	480 V, 3 PH, 4 W	3 PH, 4 W	FEEDER FROM	SEE RISER DIAGRAM
DHA	POLE/SECTION	42 \ 1	REMARKS	GROUND BAR
LOAD DESCRIPTION	LOADPHASE VA	BRKR POLES	POLE NUMBER	LOADPHASE VA
MEZZ LGT (LOC SWITCH)	L 2500	100 1 2	1200 2000	L EXTERIOR SECURITY LGT
BOWLING CLEAN LGT (LOC SWIT)	L 2500	100 3 4	1200 2000	L EXTERIOR SECURITY LGT
SPARE	L 100 5	100 5	1200 150	L EXTERIOR CANOPY LGT
LOWER LEVEL LGT (LOC SWITCH)	L 2500	100 7 8	1200	SPARE
SPARE	L 100 9	100 10	1200	SPARE
LOWER LEVEL LGT (LOC SWITCH)	L 2500	100 11 12	2500	L SITE LIGHTING
SPARE	L 100 13	100 14	1200 1148	L SITE LIGHTING (NIGHT LIGHT)
SPARE	L 100 15	100 16	1200	SPARE
LOWER LEVEL LGT (LOC SWITCH)	L 2500	100 17 18	1200	L SITE LIGHTING
SPARE	L 100 19	100 20	1200 1518	L SITE LIGHTING
SPARE	L 100 21	100 22	1200	SPARE
KITCHEN LGT (LOC SWITCH)	L 2500	100 23 24	1200	SPARE
KITCHEN LGT (LOC SWITCH)	L 2500	100 25 26	1200	SPARE
SPARE	L 100 27	100 28	1200	SPARE
SPARE	L 100 29	100 30	1200	SPARE
SPARE	L 100 31	100 32	1200	SPARE
SPARE	L 100 33	100 34	1200	SPARE
SPARE	L 100 35	100 36	45	SPARE
EGRESS CORR / STAIRWAYS	L 2500	100 37 38	3	SPARE
SPARE	L 100 39	100 40	15	SPARE
SPARE	L 100 41	100 42	15	SPARE

Panel	MAIN SIZE & TYPE	600A MLO	LOCATION	PROJECTION BOOTH
CINERGY AMARILLO	480 V, 3 PH, 4 W	3 PH, 4 W	FEEDER FROM	SEE RISER DIAGRAM
DHB	POLE/SECTION	42 \ 2	REMARKS	GROUND BAR
LOAD DESCRIPTION	LOADPHASE VA	BRKR POLES	POLE NUMBER	LOADPHASE VA
RTU-5 (7.5 TON)	M 5099	3 1 2	1120	SPARE
RTU-6 (6.5 TON)	M 5099	3 1 2	1120	SPARE
RTU-7 (4 TON)	M 3214	3 1 13	14 120	SPARE
RTU-8 (3 TON)	M 2771	3 1 19	20 120	SPARE
RTU-9 (3 TON)	M 2771	3 1 21	22 120	SPARE
RTU-10 (3 TON)	M 2771	3 1 23	24 120	SPARE
RTU-11 (3 TON)	M 2771	3 1 25	26 120	SPARE
RTU-12 (7.5 TON)	M 5099	3 1 31	32 3	SPARE
SPARE	M 5099	3 1 33	34	SPARE
SPARE	M 5099	3 1 35	36	SPARE
SPARE	M 5099	3 1 37	38	SPARE
SPARE	M 5099	3 1 39	40	SPARE
SPARE	M 5099	3 1 41	42	SPARE

Panel	MAIN SIZE & TYPE	600A MLO	LOCATION	PROJECTION BOOTH
CINERGY AMARILLO	480 V, 3 PH, 4 W	3 PH, 4 W	FEEDER FROM	SEE RISER DIAGRAM
DHC	POLE/SECTION	42 \ 2	REMARKS	GROUND BAR
LOAD DESCRIPTION	LOADPHASE VA	BRKR POLES	POLE NUMBER	LOADPHASE VA
RTU-1A (7.5 TON)	M 5099	3 1 2	3	RTU-13A (12.5 TON)
RTU-1B (7.5 TON)	M 5099	3 1 2	3	RTU-13B (12.5 TON)
RTU-2 (10 TON)	M 6404	3 1 13	14 3	RTU-14 (5 TON)
RTU-3 (10 TON)	M 6404	3 1 13	14 3	RTU-15 (5 TON)
RTU-4 (7.5 TON)	M 5099	3 1 25	26 120	SPARE
RTU-10 (3 TON)	M 2771	3 1 31	32 120	SPARE
RTU-10 (3 TON)	M 2771	3 1 33	34 120	SPARE
RTU-12B (7.5 TON)	M 5099	3 1 37	38 3	SPARE
SPARE	M 5099	3 1 39	40 42 90	SPARE

Panel	MAIN SIZE & TYPE	600A MLO	LOCATION	PROJECTION BOOTH
CINERGY AMARILLO	480 V, 3 PH, 4 W	3 PH, 4 W	FEEDER FROM	SEE RISER DIAGRAM
DHF	POLE/SECTION	42 \ 1	REMARKS	GROUND BAR
LOAD DESCRIPTION	LOADPHASE VA	BRKR POLES	POLE NUMBER	LOADPHASE VA
RTU-18 (3 TON)	M 2771	3 1 2	1200	SPARE
RTU-19 (20 TON)	M 13856	3 7 8	8 120	SPARE
RTU-23 (7.5 TON)	M 5099	3 1 13	14	SPARE
RTU-24A (3 TON)	M 2771	3 1 21	22	SPARE
RTU-24B (3 TON)	M 2771	3 1 23	24	SPARE
RTU-25 (3 TON)	M 2771	3 1 31	32 3	SPARE
SPARE	M 2771	3 1 33	34	SPARE
SPARE	M 2771	3 1 35	36	SPARE
SPARE	M 2771	3 1 37	38 3	SPARE
SPARE	M 2771	3 1 39	40	SPARE
SPARE	M 2771	3 1 41	42	SPARE

Panel	MAIN SIZE & TYPE	600A MLO	LOCATION	PROJECTION BOOTH	
CINERGY AMARILLO	480 V, 3 PH, 4 W	3 PH, 4 W	FEEDER FROM	SEE RISER DIAGRAM	
DHA	POLE/SECTION	42 \ 1	REMARKS	GROUND BAR	
LOAD DESCRIPTION	LOADPHASE VA	BRKR POLES	POLE NUMBER	LOADPHASE VA	
SPARE	L 43	46	47	48	PANEL 1LA
SPARE	L 49	50	51	52	PANEL 1LB
SPARE	L 53	54	55	56	PANEL 1LC
SPARE	L 57	58	59	60	PANEL 1LD
SPARE	L 61	62	63	64	PANEL 1LE
SPARE	L 65	66	67	68	PANEL 1LF
SPARE	L 69	70	71	72	PANEL 1LG
SPARE	L 73	74	75	76	PANEL 1LH
SPARE	L 77	78	79	80	PANEL 1LI
SPARE	L 81	82	83	84	PANEL 1LJ

Panel	MAIN SIZE & TYPE	600A MLO	LOCATION	PROJECTION BOOTH
CINERGY AMARILLO	480 V, 3 PH, 4 W	3 PH, 4 W	FEEDER FROM	SEE RISER DIAGRAM
DHB	POLE/SECTION	42 \ 2	REMARKS	GROUND BAR
LOAD DESCRIPTION	LOADPHASE VA	BRKR POLES	POLE NUMBER	LOADPHASE VA
RTU-5 (7.5 TON)	M 5099	3 1 2	1120	SPARE
RTU-6 (6.5 TON)	M 5099	3 1 2	1120	SPARE
RTU-7 (4 TON)	M 3214	3 1 13	14 120	SPARE
RTU-8 (3 TON)	M 2771	3 1 19	20 120	SPARE
RTU-9 (3 TON)	M 2771	3 1 21	22 120	SPARE
RTU-10 (3 TON)	M 2771	3 1 23	24 120	SPARE
RTU-11 (3 TON)	M 2771	3 1 25	26 120	SPARE
RTU-12 (7.5 TON)	M 5099	3 1 31	32 3	SPARE
SPARE	M 5099	3 1 33	34	SPARE
SPARE	M 5099	3 1 35	36	SPARE
SPARE	M 5099	3 1 37	38	SPARE
SPARE	M 5099	3 1 39	40	SPARE
SPARE	M 5099	3 1 41	42	SPARE

Panel	MAIN SIZE & TYPE	600A MLO	LOCATION	PROJECTION BOOTH
CINERGY AMARILLO	480 V, 3 PH, 4 W	3 PH, 4 W	FEEDER FROM	SEE RISER DIAGRAM
DHC	POLE/SECTION	42 \ 2	REMARKS	GROUND BAR
LOAD DESCRIPTION	LOADPHASE VA	BRKR POLES	POLE NUMBER	LOADPHASE VA
RTU-1A (7.5 TON)	M 5099	3 1 2	3	RTU-13A (12.5 TON)
RTU-1B (7.5 TON)	M 5099	3 1 2	3	RTU-13B (12.5 TON)
RTU-2 (10 TON)	M 6404	3 1 13	14 3	RTU-14 (5 TON)
RTU-3 (10 TON)	M 6404	3 1 13	14 3	RTU-15 (5 TON)
RTU-4 (7.5 TON)	M 5099	3 1 25	26 120	SPARE
RTU-10 (3 TON)	M 2771	3 1 31	32 120	SPARE
RTU-10 (3 TON)	M 2771	3 1 33	34 120	SPARE
RTU-12B (7.5 TON)	M 5099	3 1 37	38 3	SPARE
SPARE	M 5099	3 1 39	40 42 90	SPARE

Panel	MAIN SIZE & TYPE	600A MLO	LOCATION	PROJECTION BOOTH
CINERGY AMARILLO	480 V, 3 PH, 4 W	3 PH, 4 W	FEEDER FROM	SEE RISER DIAGRAM
DHF	POLE/SECTION	42 \ 1	REMARKS	GROUND BAR
LOAD DESCRIPTION	LOADPHASE VA	BRKR POLES	POLE NUMBER	LOADPHASE VA
RTU-18 (3 TON)	M 2771	3 1 2	1200	SPARE
RTU-19 (20 TON)	M 13856	3 7 8	8 120	SPARE
RTU-23 (7.5 TON)	M 5099	3 1 13	14	SPARE
RTU-24A (3 TON)	M 2771	3 1 21	22	SPARE
RTU-24B (3 TON)	M 2771	3 1 23	24	SPARE
RTU-25 (3 TON)	M 2771	3 1 31	32 3	SPARE
SPARE	M 2771	3 1 33	34	SPARE
SPARE	M 2771	3 1 35	36	SPARE
SPARE	M 2771	3 1 37	38 3	SPARE
SPARE	M 2771	3 1 39	40	SPARE
SPARE	M 2771	3 1 41	42	SPARE

Panel	MAIN SIZE & TYPE	600A MLO	LOCATION	PROJECTION BOOTH	
CINERGY AMARILLO	480 V, 3 PH, 4 W	3 PH, 4 W	FEEDER FROM	SEE RISER DIAGRAM	
DHA	POLE/SECTION	42 \ 1	REMARKS	GROUND BAR	
LOAD DESCRIPTION	LOADPHASE VA	BRKR POLES	POLE NUMBER	LOADPHASE VA	
SPARE	L 43	46	47	48	PANEL 1LA
SPARE	L 49	50	51	52	PANEL 1LB
SPARE	L 53	54	55	56	PANEL 1LC
SPARE	L 57	58	59	60	PANEL 1LD
SPARE	L 61	62	63	64	PANEL 1LE
SPARE	L 65	66	67	68	PANEL 1LF
SPARE	L 69	70	71	72	PANEL 1LG
SPARE	L 73	74	75	76	PANEL 1LH
SPARE	L 77	78	79	80	PANEL 1LI
SPARE	L 81	82	83	84	PANEL 1LJ

Panel	MAIN SIZE & TYPE	600A MLO	LOCATION	PROJECTION BOOTH
CINERGY AMARILLO	480 V, 3 PH, 4 W	3 PH, 4 W	FEEDER FROM	SEE RISER DIAGRAM
DHB	POLE/SECTION	42 \ 2	REMARKS	GROUND BAR
LOAD DESCRIPTION	LOADPHASE VA	BRKR POLES	POLE NUMBER	LOADPHASE VA
RTU-5 (7.5 TON)	M 5099	3 1 2	1120	SPARE
RTU-6 (6.5 TON)	M 5099	3 1 2	1120	SPARE
RTU-7 (4 TON)	M 3214	3 1 13	14 120	SPARE
RTU-8 (3 TON)	M 2771	3 1 19	20 120	SPARE
RTU-9 (3 TON)	M 2771	3 1 21	22 120	SPARE
RTU-10 (3 TON)	M 2771	3 1 23	24 120	SPARE
RTU-11 (3 TON)	M 2771	3 1 25	26 120	SPARE
RTU-12 (7.5 TON)	M 5099	3 1 31	32 3	SPARE
SPARE	M 5099	3 1 33	34	SPARE
SPARE	M 5099	3 1 35	36	SPARE
SPARE	M 5099	3 1 37	38	SPARE
SPARE	M 5099	3 1 39	40	SPARE
SPARE	M 5099	3 1 41	42	SPARE

Panel	MAIN SIZE & TYPE	600A MLO	LOCATION	PROJECTION BOOTH
CINERGY AMARILLO	480 V, 3 PH, 4 W	3 PH, 4 W	FEEDER FROM	SEE RISER DIAGRAM
DHC	POLE/SECTION	42 \ 2	REMARKS	GROUND BAR
LOAD DESCRIPTION	LOADPHASE VA	BRKR POLES	POLE NUMBER	LOADPHASE VA
RTU-1A (7.5 TON)	M 5099	3 1 2	3	RTU-13A (12.5 TON)
RTU-1B (7.5 TON)	M 5099	3 1 2	3	RTU-13B (12.5 TON)
RTU-2 (10 TON)	M 6404	3 1 13	14 3	RTU-14 (5 TON)
RTU-3 (10 TON)	M 6404	3 1 13	14 3	RTU-15 (5 TON)
RTU-4 (7.5 TON)	M 5099	3 1 25	26 120	SPARE
RTU-10 (3 TON)	M 2771	3 1 31	32 120	SPARE
RTU-10 (3 TON)	M 2771	3 1 33	34 120	SPARE
RTU-12B (7.5 TON)	M 5099	3 1 37	38 3	SPARE
SPARE	M 5099	3 1 39	40 42 90	SPARE

Panel	MAIN SIZE & TYPE	600A MLO	LOCATION	PROJECTION BOOTH
CINERGY AMARILLO	480 V, 3 PH, 4 W	3 PH, 4 W	FEEDER FROM	SEE RISER DIAGRAM
DHF	POLE/SECTION	42 \ 1	REMARKS	GROUND BAR
LOAD DESCRIPTION	LOADPHASE VA	BRKR POLES	POLE NUMBER	LOADPHASE VA
RTU-18 (3 TON)	M 2771	3 1 2	1200	SPARE
RTU-19 (20 TON)	M 13856	3 7 8	8 120	SPARE
RTU-23 (7.5 TON)	M 5099	3 1 13	14	SPARE
RTU-24A (3 TON)	M 2771	3 1 21	22	SPARE
RTU-24B (3 TON)	M 2771	3 1 23	24	SPARE
RTU-25 (3 TON)	M 2771	3 1 31	32 3	SPARE
SPARE	M 2771	3 1 33	34	SPARE
SPARE	M 2771	3 1 35	36	SPARE
SPARE	M 2771	3 1 37	38 3	SPARE
SPARE	M 2771	3 1 39	40	SPARE
SPARE	M 2771	3 1 41	42	SPARE

Panel	MAIN SIZE & TYPE	600A MLO	LOCATION	PROJECTION BOOTH
CINERGY AMARILLO	480 V, 3 PH, 4 W	3 PH, 4 W	FEEDER FROM	SEE RISER DIAGRAM
DHA				